


## STEP ONE > Pre-installation

Make sure the heat spreader on the top of the CPU die is perfectly clean.


The base of the heatsink is protected by a plastic cover, which protects the thermal interface compound that is pre-applied to the heatsink. This protective cover must be removed prior to installation.

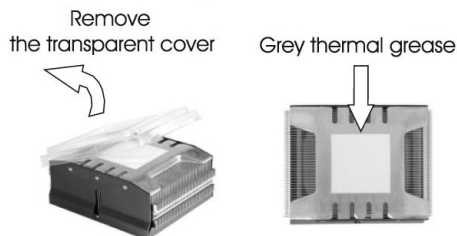

## STEP TWO > Clip Placement


Hook the end of the clip into the cut-out in the retention module corner leg, do the same for both clips.

Make sure the clips are located in the heatsink slots.

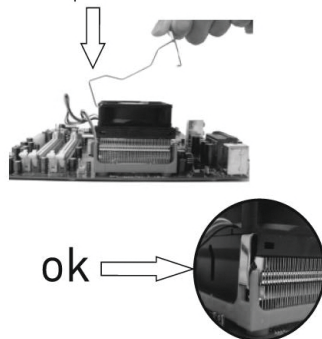


## STEP THREE > Clip Attachment

Hold the heatsink to keep the bottom of the heatsink in contact with CPU.

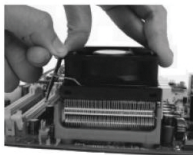

Place the clip hook into the RM cut-out using the thumb bar, do the same for both clips. Make sure the heatsink is correctly located.

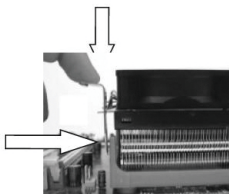

## STEP FOUR >

### Connect the Fan Power

Connect the CPU cooler fan to the motherboard power connector marked CPU FAN. This connector is keyed so the power lead can only be installed one way. If a connector marked CPU FAN is not apparent on the board, check the motherboard manual for fan connection information.

